

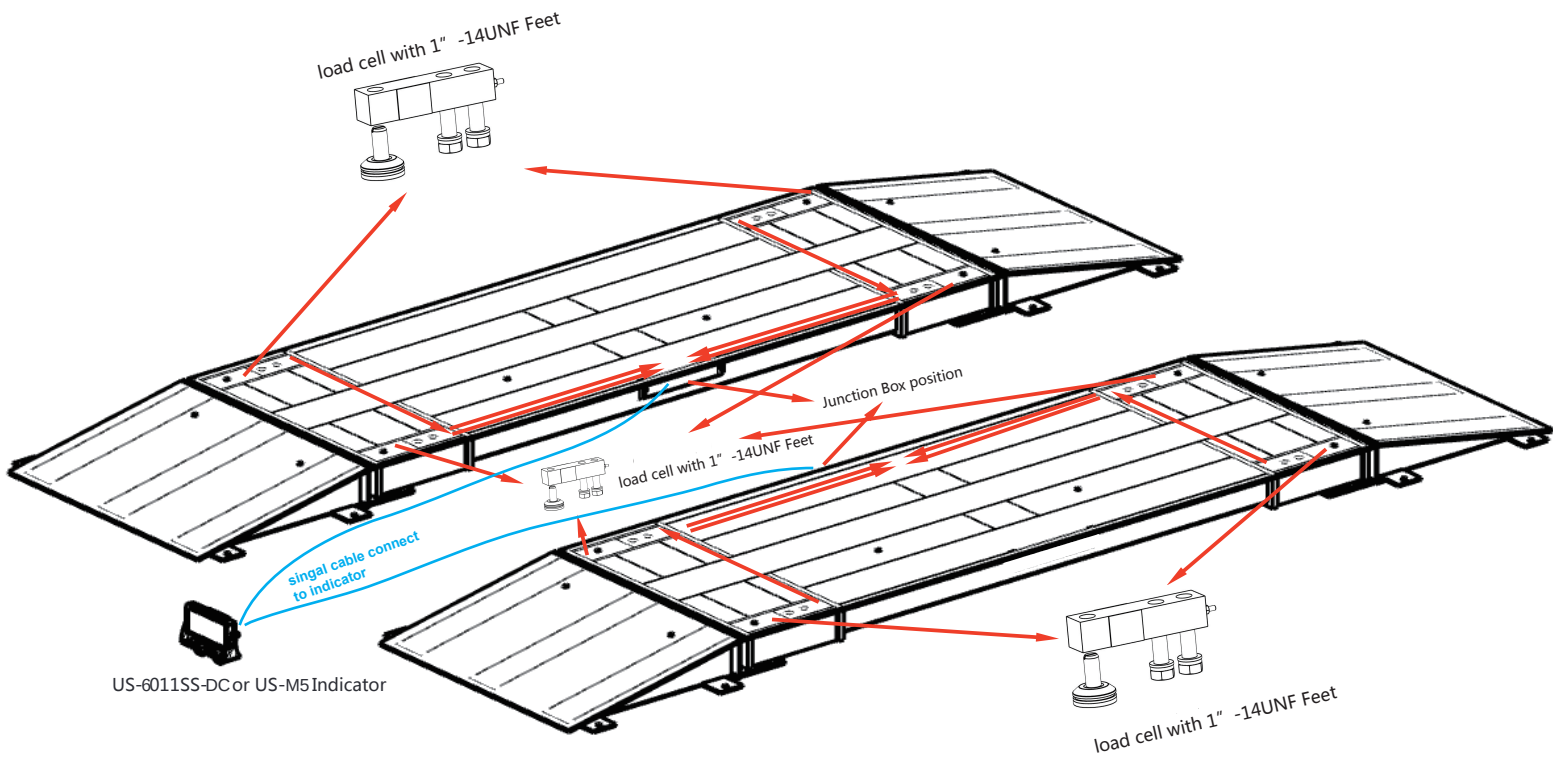



Installation Instruction for Axle Scales

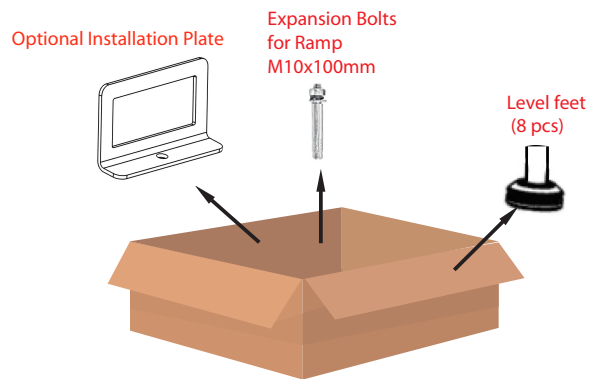


US-6011SS-DC or US-M5 (Display Will Change based on configuration)

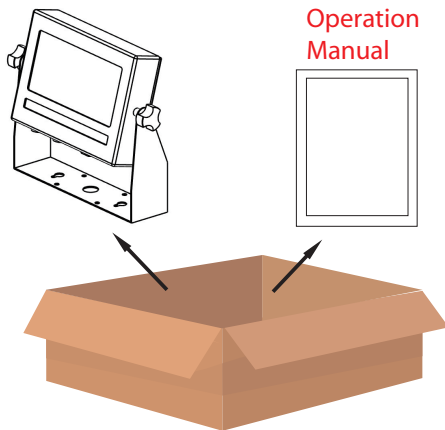


(1) Make sure the complete installation is done on the level ground .

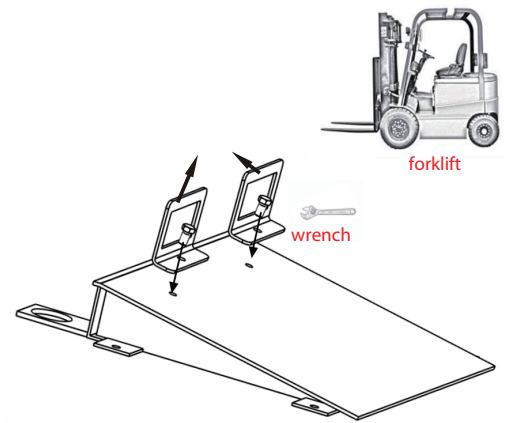


(2) Bolt the installation plate to the ramps and place the ramps 87" apart in parallel with forklift

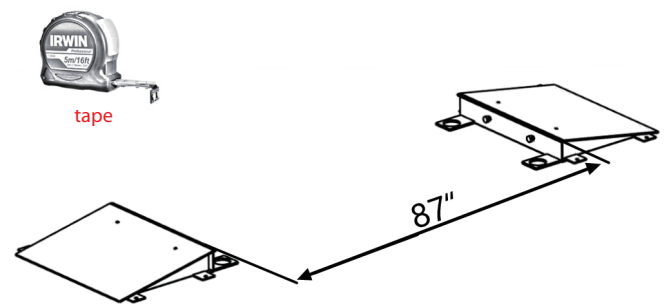


(3) Bolt the installation plates to the platform and screw the four threaded level feet into the four corners of the platform while lifting it with the forklift.

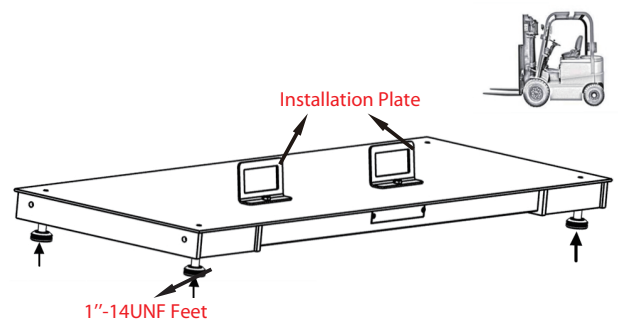

(4) Place the platform between the two ramps, making sure all the feet sit inside the rings on the ramps.

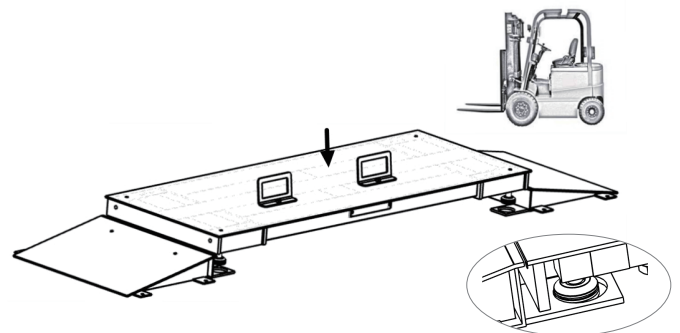


If necessary, adjust the height with a screwdriver from the top.

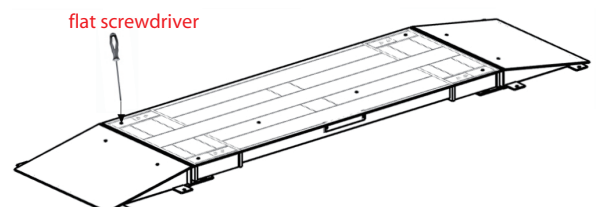


(5) Pull out the interface cable

Open the cover on the side and you will find the junction box with a 50ft long cable nested inside. Run the cable (with connector) through hole on the bottom and pull it out from underneath as long as you need.


Close the cover with the original screws after this is finished.

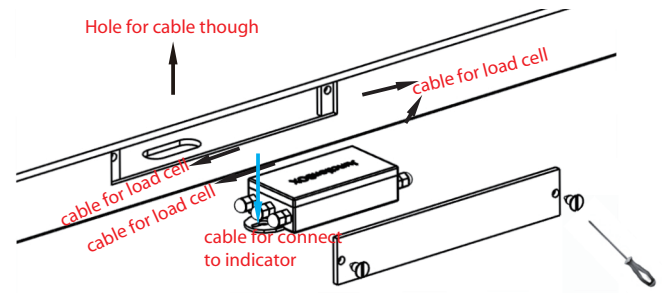

(6) Follow the same steps to install the other set.

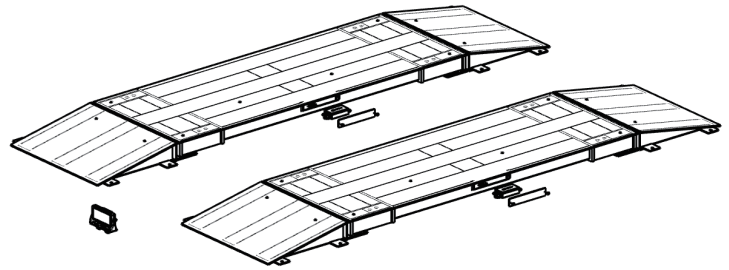

(7) Plug the connectors on the interface cables to the 2 ports of the indicator.

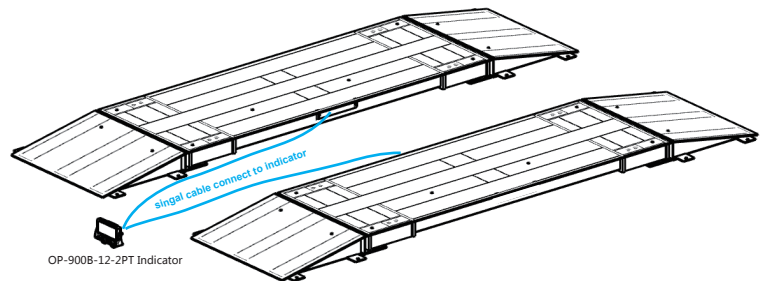

(8) For permanent use, install anchoring bolts to the ramps.

